

INSTALLATION INSTRUCTIONS

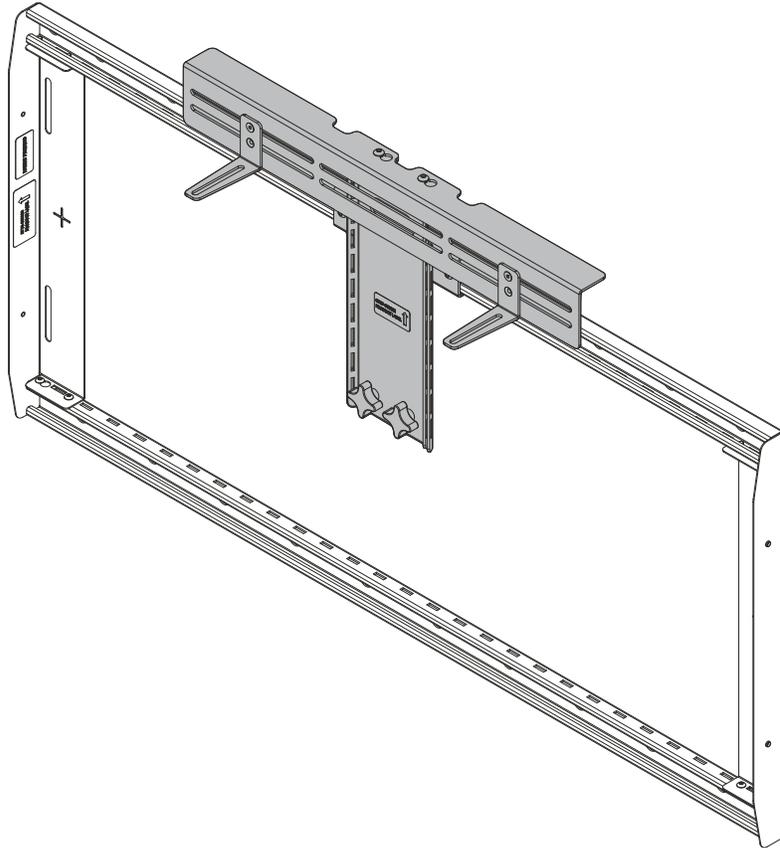

AS3LD Video Soundbar Mount

CHIEF[®]
A brand of  legrand

AS3A101

DISCLAIMER

Legrand | AV and its affiliated corporations and subsidiaries (collectively "Legrand | AV"), intend to make this manual accurate and complete. However, Legrand | AV makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Legrand | AV makes no representation of warranty, expressed or implied, regarding the information contained herein. Legrand | AV assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® is a registered trademark of Legrand AV Inc.

DEFINITIONS

MOUNTING SYSTEM: A MOUNTING SYSTEM is the primary Chief product to which an accessory and/or component is attached.

ACCESSORY: AN ACCESSORY is the secondary Chief product which is attached to a primary Chief product, and may have a component attached or setting on it.

COMPONENT: A COMPONENT is an audiovisual item designed to be attached or resting on an accessory or mounting system such as a video camera, CPU, screen, display, projector, etc.



WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.



CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.



IMPORTANT SAFETY INSTRUCTIONS




WARNING: Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all accessories are properly assembled and installed using the instructions provided.



WARNING: Failure to provide adequate structural strength for this accessory can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this accessory is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the mounting system.



WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components attached to the AS3A101 accessory does not exceed 15 lbs (6.8 kg) if using L-brackets or 20 lbs (9 kg) if installing directly to soundbar bracket. (See figure below for details)

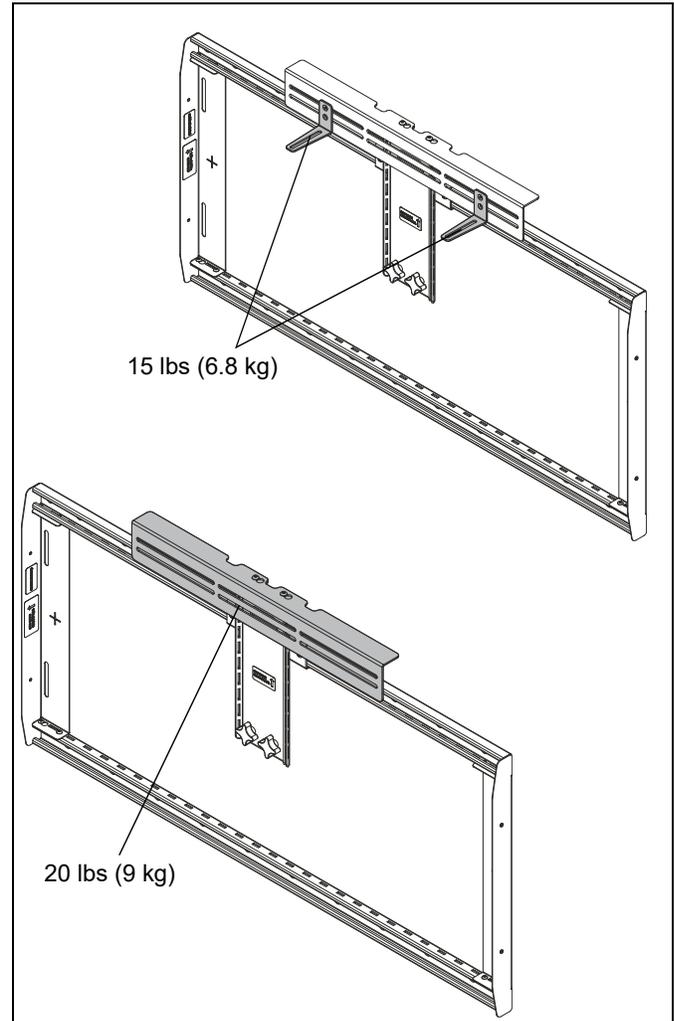

WARNING: Use this mounting system only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.




WARNING: Never operate this mounting system if it is damaged. Return the mounting system to a service center for examination and repair.

IMPORTANT ! : The AS3A101 accessory is designed to be mounted to a Chief® AS3LD mounting system.


--SAVE THESE INSTRUCTIONS

DIMENSIONS

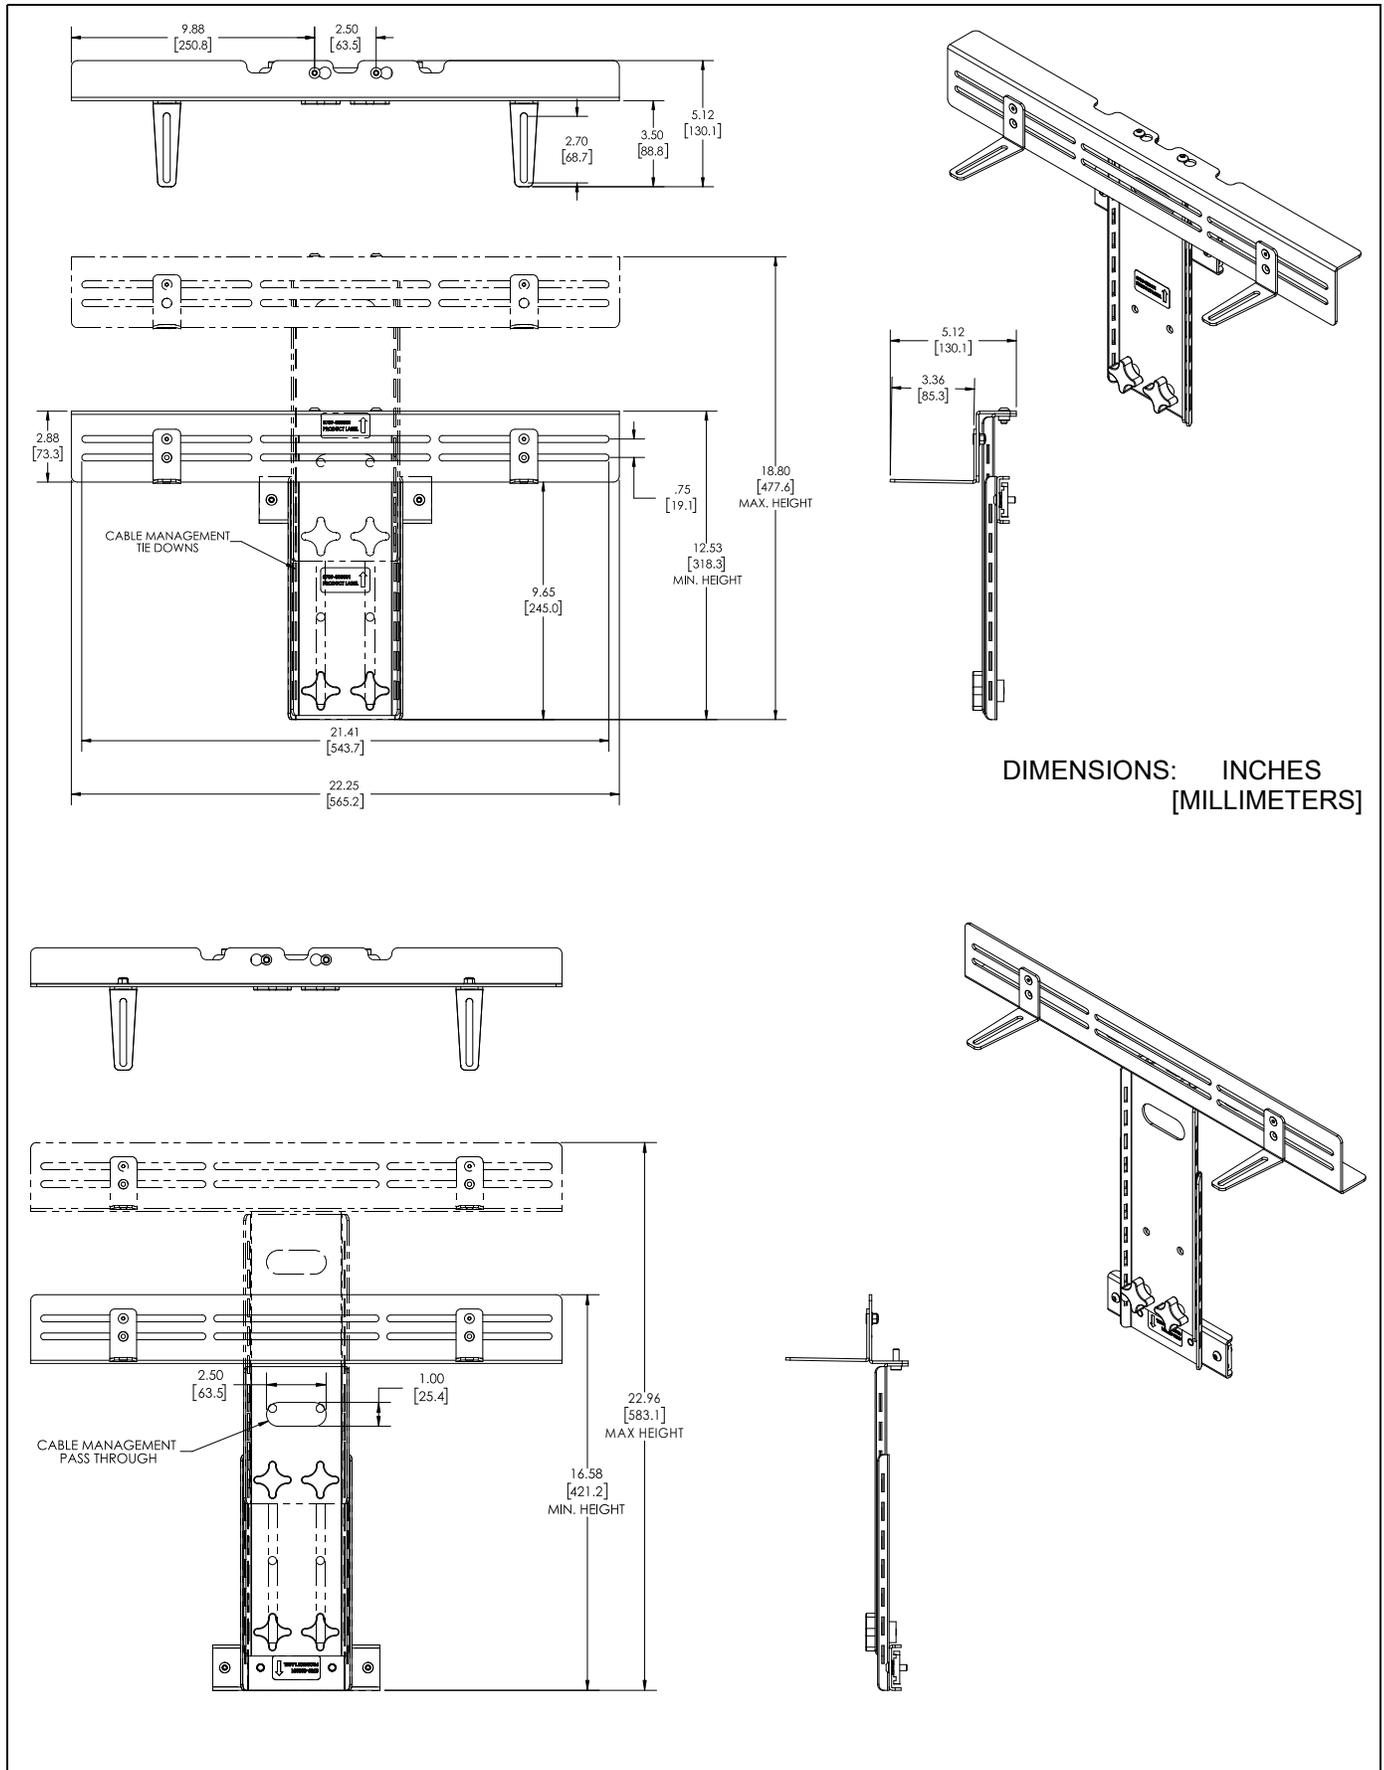


DIMENSIONS: INCHES
[MILLIMETERS]


DIMENSIONS (CONTINUED)

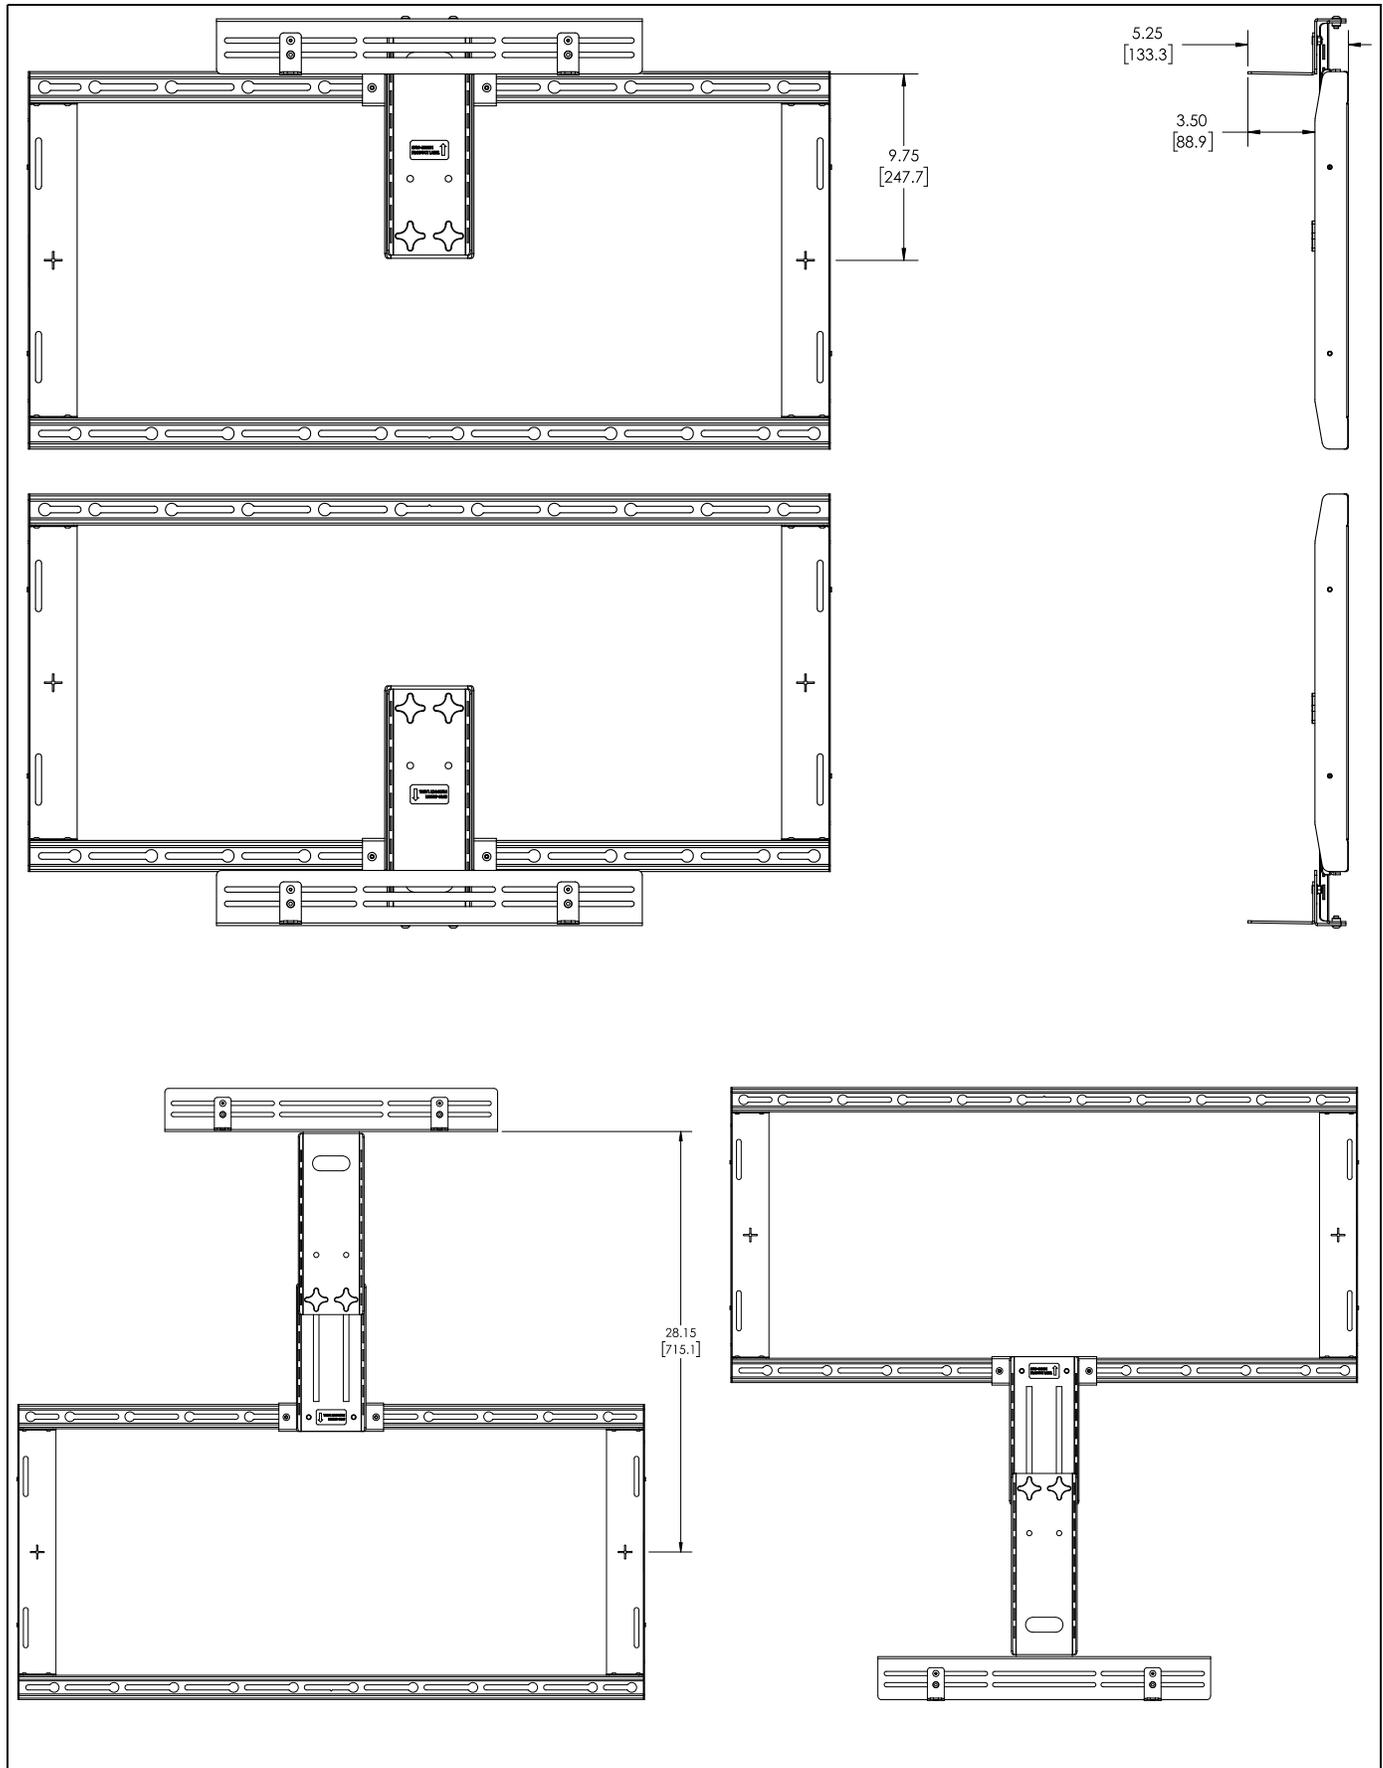


LEGEND

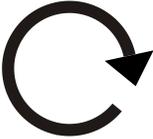	<p>Tighten Fastener</p> <p>Apretar elemento de fijación</p> <p>Befestigungsteil festziehen</p> <p>Apertar fixador</p> <p>Serrare il fissaggio</p> <p>Bevestiging vastdraaien</p> <p>Serrez les fixations</p>		<p>Pencil Mark</p> <p>Marcar con lápiz</p> <p>Stiftmarkierung</p> <p>Marcar com lápis</p> <p>Segno a matita</p> <p>Potloodmerkten</p> <p>Marquage au crayon</p>
	<p>Loosen Fastener</p> <p>Aflojar elemento de fijación</p> <p>Befestigungsteil lösen</p> <p>Desapertar fixador</p> <p>Allentare il fissaggio</p> <p>Bevestiging losdraaien</p> <p>Desserrez les fixations</p>		<p>Drill Hole</p> <p>Perforar</p> <p>Bohrloch</p> <p>Fazer furo</p> <p>Praticare un foro</p> <p>Gat boren</p> <p>Percez un trou</p>
	<p>Phillips Screwdriver</p> <p>Destornillador Phillips</p> <p>Kreuzschlitzschraubendreher</p> <p>Chave de fendas Phillips</p> <p>Cacciavite a stella</p> <p>Kruiskopschroevendraaier</p> <p>Tournevis à pointe cruciforme</p>		<p>Adjust</p> <p>Ajustar</p> <p>Einstellen</p> <p>Ajustar</p> <p>Regolare</p> <p>Afstellen</p> <p>Ajuster</p>
	<p>Open-Ended Wrench</p> <p>Llave de boca</p> <p>Gabelschlüssel</p> <p>Chave de bocas</p> <p>Chiave a punte aperte</p> <p>Steeksleutel</p> <p>Clé à fourche</p>		<p>Remove</p> <p>Quitar</p> <p>Entfernen</p> <p>Remover</p> <p>Rimuovere</p> <p>Verwijderen</p> <p>Retirez</p>
	<p>By Hand</p> <p>A mano</p> <p>Von Hand</p> <p>Com a mão</p> <p>A mano</p> <p>Met de hand</p> <p>À la main</p>		<p>Optional</p> <p>Opcional</p> <p>Optional</p> <p>Opcional</p> <p>Opzionale</p> <p>Optie</p> <p>En option</p>
	<p>Hex-Head Wrench</p> <p>Llave de cabeza hexagonal</p> <p>Sechskantschlüssel</p> <p>Chave de cabeça sextavada</p> <p>Chiave esagonale</p> <p>Zeskantsleutel</p> <p>Clé à tête hexagonale</p>		<p>Security Wrench</p> <p>Llave de seguridad</p> <p>Sicherheitsschlüssel</p> <p>Chave de segurança</p> <p>Chiave di sicurezza</p> <p>Veiligheidsleutel</p> <p>Clé de sécurité</p>

TOOLS REQUIRED FOR INSTALLATION

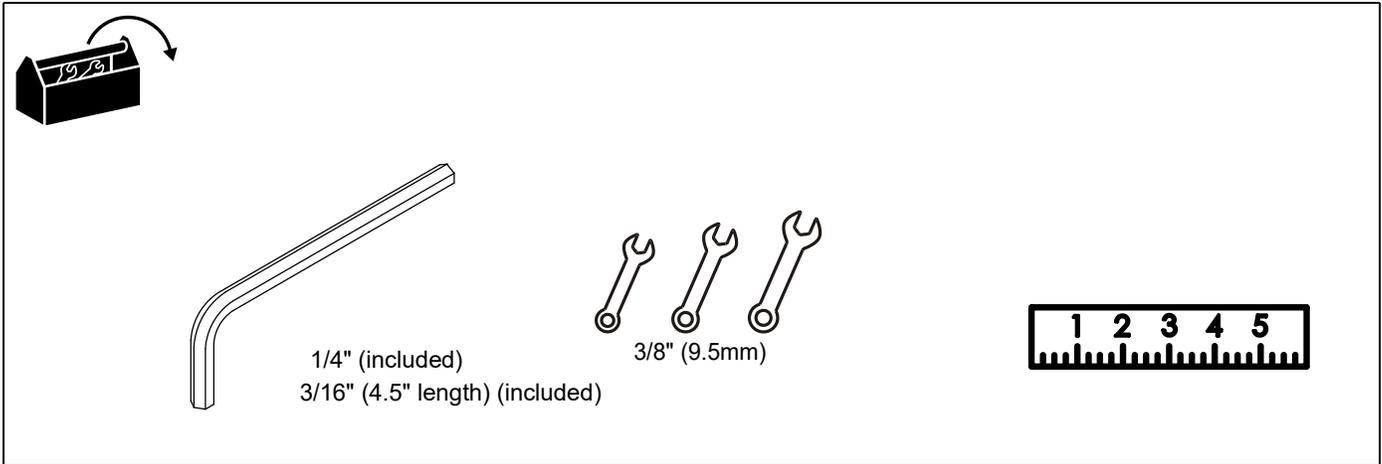

PARTS

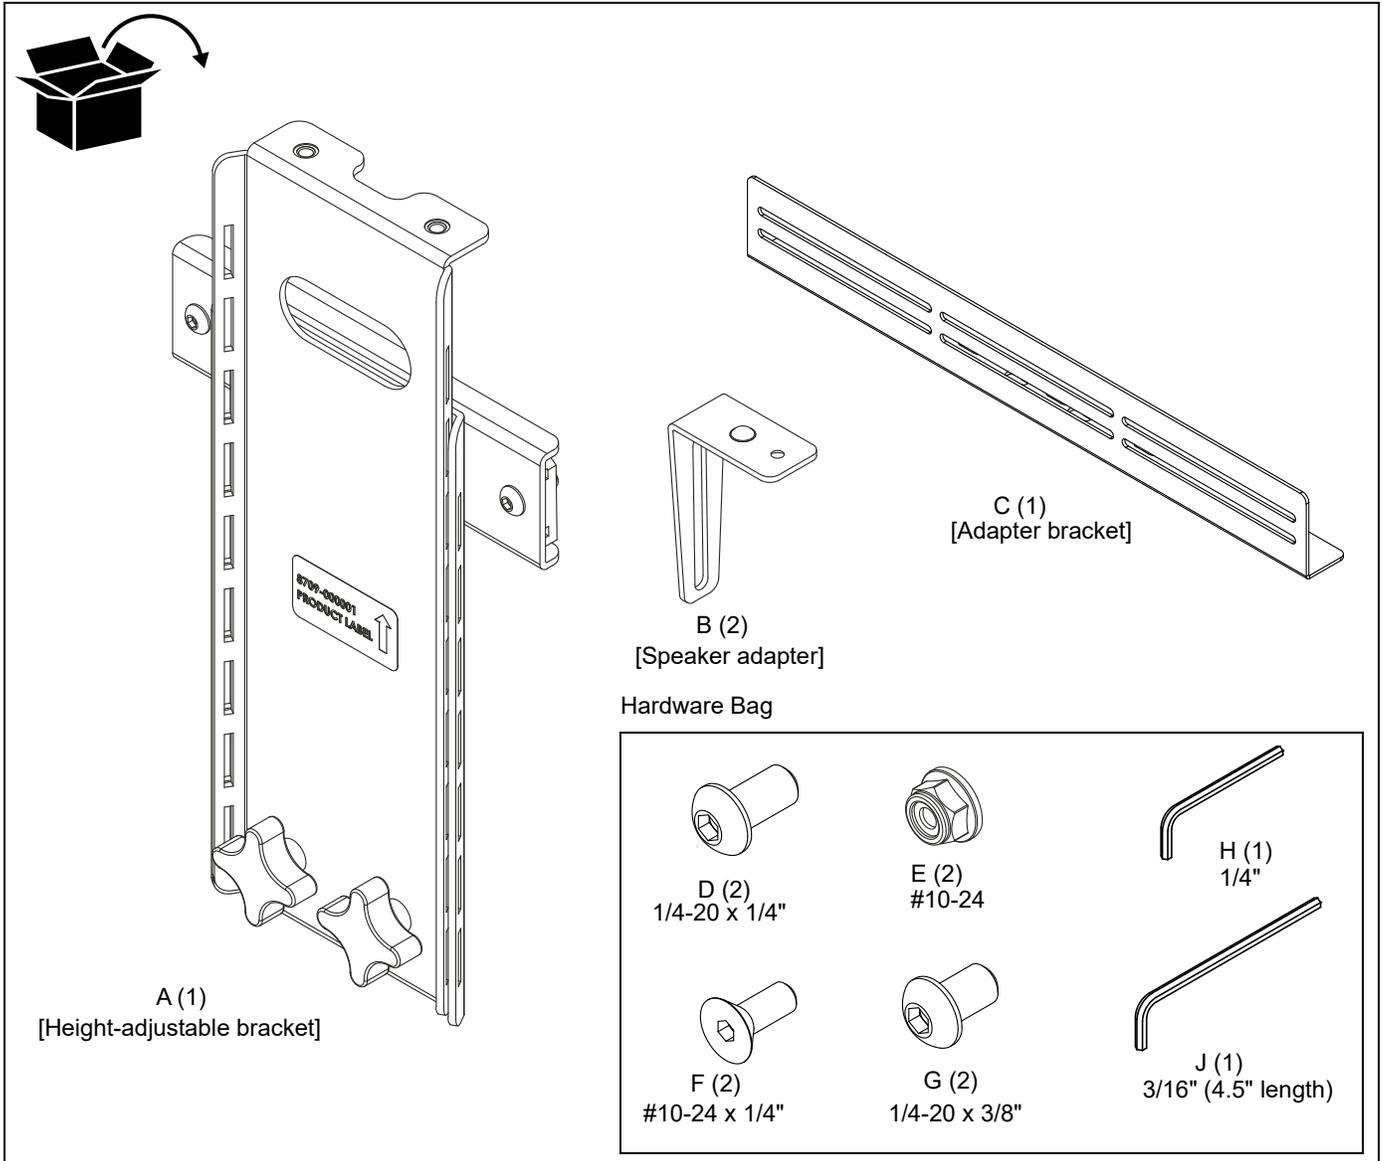

Assembly And Installation

IMPORTANT ! : If installing to displays larger than 65", height-adjustable bracket (A) will need to be disassembled and reassembled in order to achieve a longer length. For smaller displays, proceed to Step 3.

1. (Displays 65" and larger ONLY) Remove height-adjustment knobs from height-adjustable bracket (A). (See Figure 1)

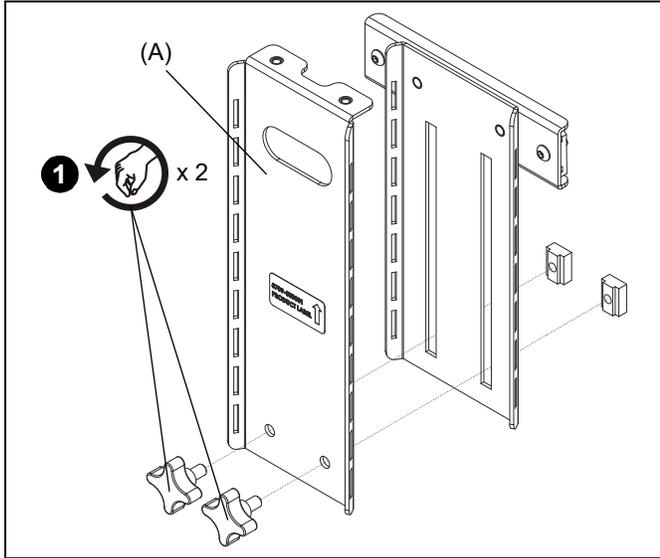


Figure 1

2. (Displays 65" and larger ONLY) Rotate extension bracket 180° and re-install height-adjustment knobs to secure brackets in new orientation. (See Figure 2)

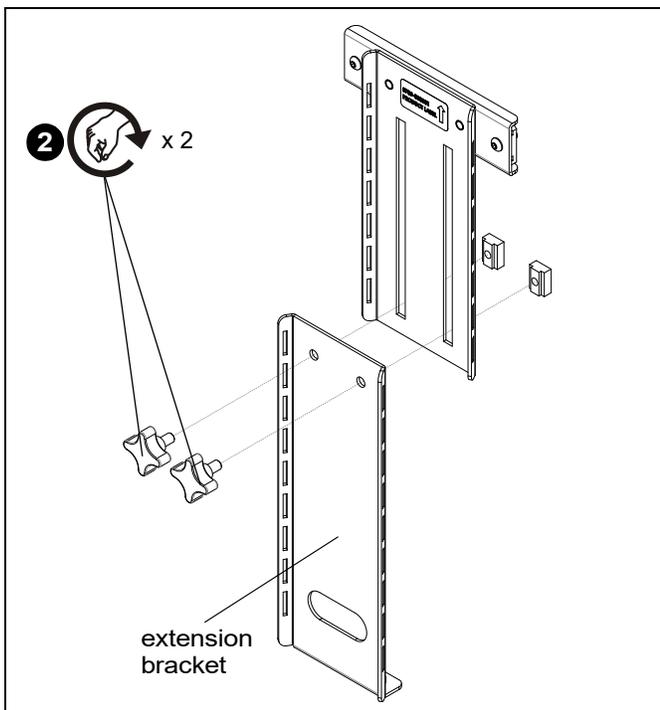


Figure 2

3. Loosen two strut nuts on back of height-adjustable bracket (A) and rotate until they are in a horizontal position. (See Figure 3)

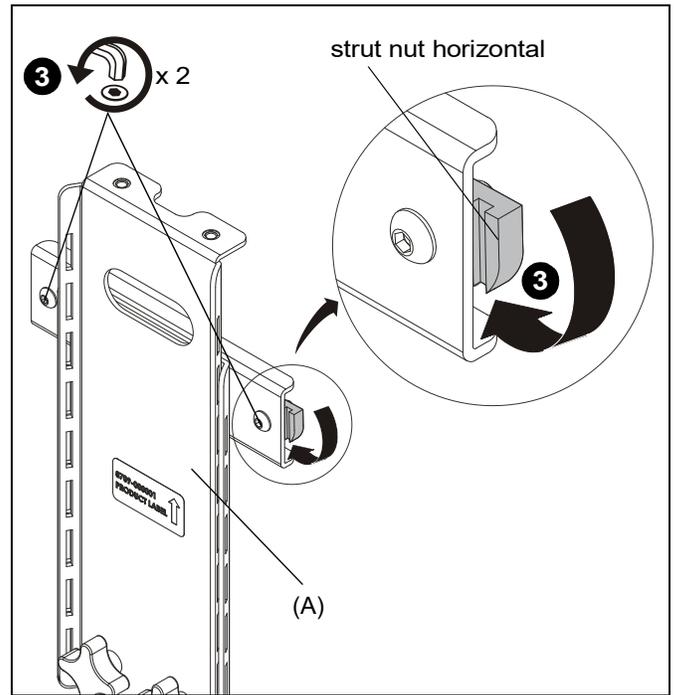


Figure 3

4. Install height-adjustable bracket (A) onto AS3LD mount at desired mounting position. (See Figure 4)

NOTE: AS3A101 shelf can be installed above or below display.

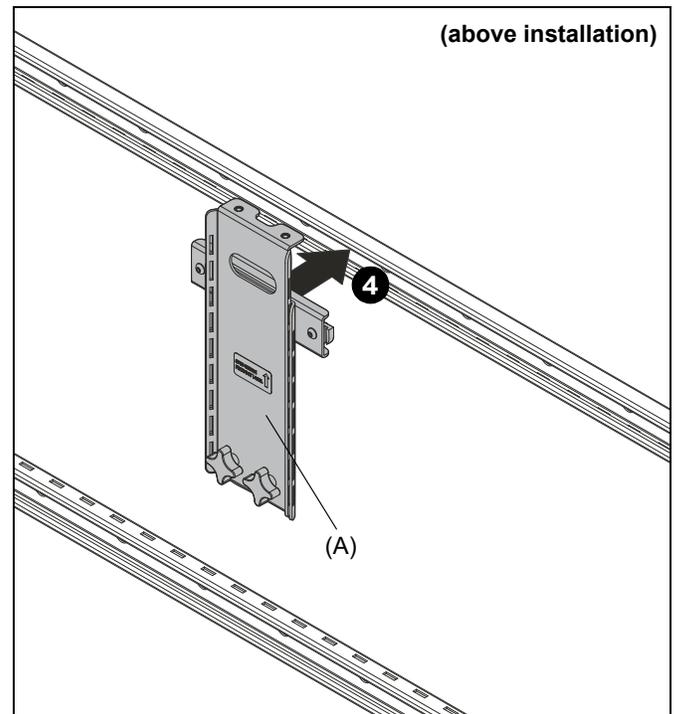


Figure 4

5. Rotate strut nuts until they are back in a vertical position and tighten button head cap screws. (See Figure 5)

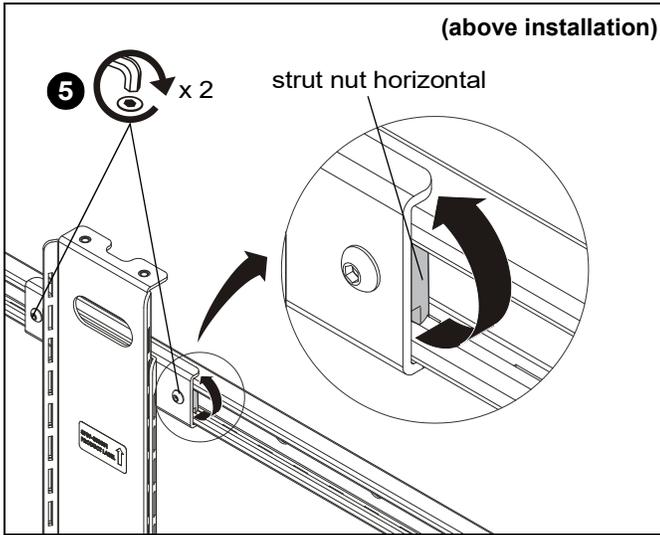


Figure 5

NOTE: If speaker adapters (B) are not needed, proceed to Step 7.

NOTE: Speaker adapters (B) may be installed in either direction using either upper or lower screw hole.

6. Use two #10-24 x 1/4" flat head cap screws (F) and two #10-24 flange hex nuts (E) to secure two speaker adapters (B) to adapter bracket (C). (See Figure 6)

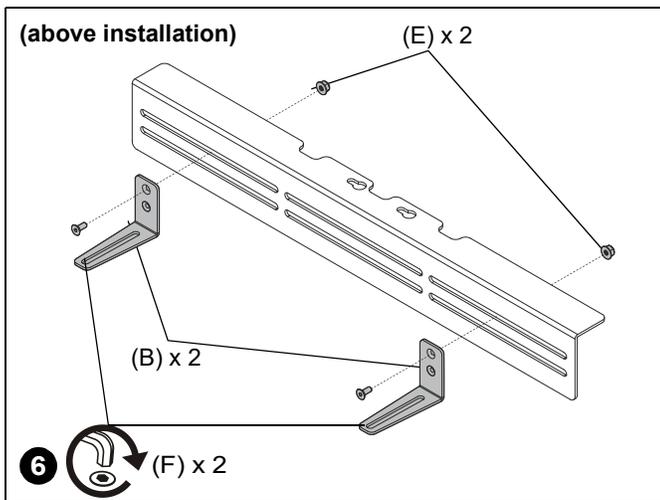


Figure 6

NOTE: Adapter bracket (C) can be installed in either orientation.

7. Loosely install two 1/4-20 x 1/4" button head cap screws (D) into top holes on height-adjustable bracket (A). (See Figure 7) or (See Figure 8)
8. Install adapter bracket (C) onto screws installed in Step 1 and slide back into the narrow part of the keyhole. (See Figure 7) or (See Figure 8)
9. Tighten screws (D) to secure adapter bracket (C). (See Figure 7) or (See Figure 8)

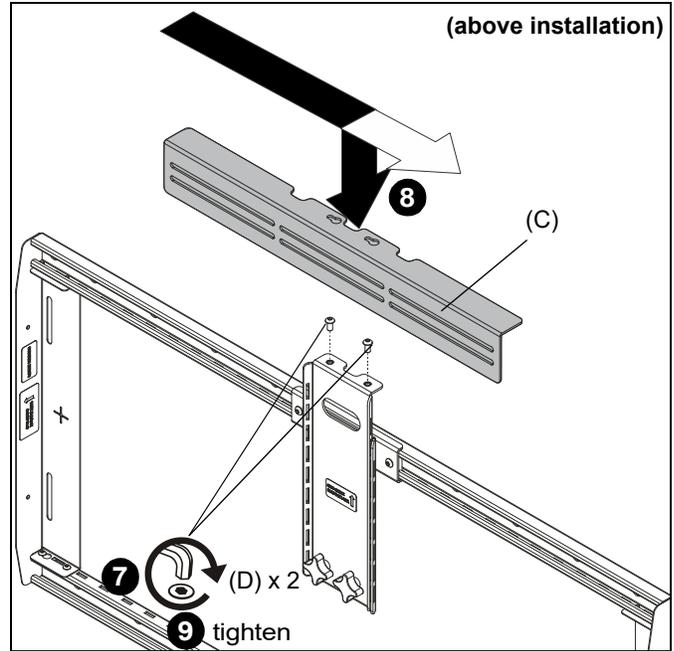


Figure 7

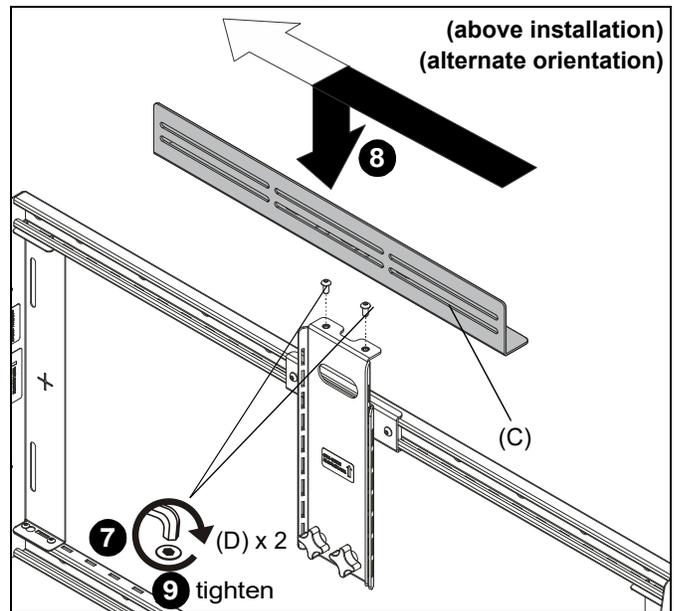


Figure 8

Soundbar Installation

⚠ WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components attached to the AS3A101 accessory does not exceed 15 lbs (6.8 kg) if using L-brackets or 20 lbs (9 kg) if installing directly to soundbar bracket. (See figure on page 2 for details)

1. Use soundbar hardware to install sound bar to adapter bracket (C) or speaker adapters (B).

CHIEF®

A brand of  **legrand®**

8800-003397 Rev00
©2023 Legrand | AV
www.legrandav.com
10/2024

USA/International	A 6436 City West Parkway, Eden Prairie, MN 55344 P 800.582.6480 / 952.225.6000 F 877.894.6918 / 952.894.6918
Europe	A Franklinstraat 14, 6003 DK Weert, Netherlands P +31 (0) 495 580 852 F +31 (0) 495 580 845
Asia Pacific	A Office No. 918 on 9/F, Shatin Galleria 18-24 Shan Mei Street Fotan, Shatin, Hong Kong P 852 2145 4099 F 852 2145 4477

