

LONE

AUDIO

LA-350



INDEX

OPERATION.....	1
GENERAL USE INSTRUCTIONS.....	2
SPECIFICATIONS.....	2
CONTROLS AND CONNECTIONS.....	3



- **CAUTION, TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK)**
- **THIS PRODUCT MUST BE EARTHED**
- **NO USER-SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL**

OPERATION


1. Prior to switching on, turn volume down to minimum.
2. Connect the audio source to the appropriate Input socket
3. Connect to the mains supply.
4. Switch on the audio source, followed by the active speaker.
5. Set the volume with the applicable control.
6. Adjust the bass + treble.

INSTRUCTIONS

- Do not overload the box to avoid damage to the speakers.
- Do not place an open fire (candles etc) on top or next to the box - FIRE HAZARD
- For indoor use only. If the box is used outdoors, you need to make sure that no humidity can enter the box.
- When not in use, unplug the unit from the mains.
- Unplug the unit from the mains prior to checking or replacing the fuse.
- Make sure that the box is placed on a stable, strong surface.
- The boxes can be hung. Use only strong and approved mounting material. During the mounting, make sure that nobody is standing below the mounting area.
- Do not place liquids on the box and protect it against humidity. Humidity can shorten the life time considerably.
- Only use suitable means of transportation if you want to move the box - BEWARE OF YOUR BACK !!
- Always unplug the unit during a thunderstorm or when it is not in use.
- If the unit has not been used for a long period of time, condensation can occur inside the housing. Please let the unit reach room temperature prior to use.
- Never try to repair the unit yourself. It does not contain any user serviceable parts.
- Run the mains lead in such a way that nobody can fall over it and nothing can be put in it.
- Set the unit to the lowest volume prior to switching it on.
- Keep the unit out of the reach of children.

SPECIFICATIONS

	10" Speaker box
System	Active 2-way full range
Woofers	10"
RMS Power	250W+100W
Impedance	4 Ohm
Frequency Range	40Hz-18KHZ
Sensitivity	96dB (+/-2dB)
Connector	XLR/6.35mm/RCA
Mic Input Level	<20 MV
Line Input/Output Level	500 MV

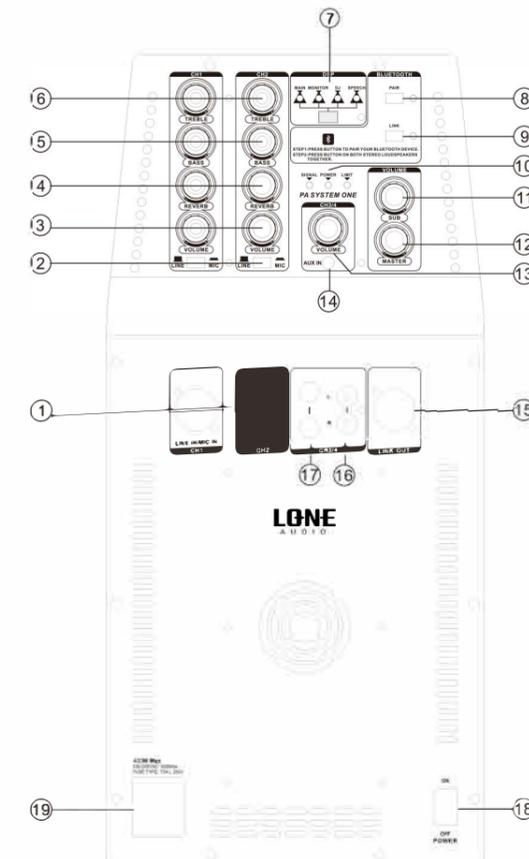

1. CH1/CH2 LINE IN/MIC IN Mix jack
2. LINE IN/MIC IN Switch of CH1/CH2 Corresponding Channel
3. Volume control of CH1/CH2 Corresponding Channel
4. Effect volume control of CH1/CH2 Corresponding Channel
5. Bass control of CH1/CH2 Corresponding Channel
6. Treble control of CH1/CH2 Corresponding Channel
7. DSP modes elector switch and mode indicator
8. Bluetooth pairing button: After long press of the button, the indicator light flashes slowly, then press the indicator light quickly to flash, and the pairing connection can be made through Bluetooth connection device such as a mobile phone.
9. Link button: When two machines are used together, presses this button to pair as a stereo.

10. Indicator lamps: signal indicator, power supply indicator and limit indicator
11. Subwoofer volume control
12. The whole device volume control
13. CH3/CH4 Volume control
14. CH3/CH4 3.5mm input jack
15. CH1/CH2CH3/CH4/Bluetooth Mixed Signal LINE OUT
16. CH3/CH4 RCA input jack
17. CH3/CH4 6.35mm input jack
18. Main power switch
19. Fused IEC mains inlet