
INSTALLATION INSTRUCTIONS

Kiosk Protective Glass Kits

DISCLAIMER

Legrand | AV and its affiliated corporations and subsidiaries (collectively "Legrand | AV"), intend to make this manual accurate and complete. However, Legrand | AV makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Legrand | AV makes no representation of warranty, expressed or implied, regarding the information contained herein. Legrand | AV assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® is a registered trademark of Legrand AV Inc.

DEFINITIONS

MOUNTING SYSTEM: A MOUNTING SYSTEM is the primary Chief product to which an accessory and/or component is attached.

ACCESSORY: AN ACCESSORY is the secondary Chief product which is attached to a primary Chief product, and may have a component attached or setting on it.

COMPONENT: A COMPONENT is an audiovisual item designed to be attached or resting on an accessory or mounting system such as a video camera, CPU, screen, display, projector, etc.



WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.



CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.



IMPORTANT SAFETY INSTRUCTIONS



WARNING: Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all accessories are properly assembled and installed using the instructions provided.



WARNING: Failure to provide adequate structural strength for this accessory can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this accessory is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the accessory.



WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components attached to swing door, including the glass kit, does not exceed:

- LWG-43CL: 85 lbs (38.6 kg);
- LWG-48CL: 80 lbs (36.3 kg);
- LWG-55CL: 100 lbs (45.4 kg);
- LWG-70CL: 90 lbs (40.8 kg);
- LWG-75CL: 160 lbs (72.6 kg)



WARNING: Use this accessory only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.



WARNING: Never operate this accessory if it is damaged. Return the accessory to a service center for examination and repair.



WARNING: Do not use this accessory outdoors.



IMPORTANT ! : The Kiosk Protective Glass Kit accessories are designed to be installed into the following model kiosks:

- LWG-43CL installs into LW40-42-43UxP models;
- LWG-48CL installs into LW46-47-48UxP models;
- LWG-55CL installs into LW49-50-55UxP models;
- LWG-70CL installs into LW65-70UxP models;
- LWG-75CL installs into LW75UxP models.



NOTE: Available monitor space is reduced by 0.25" (6.25mm) for kiosks with glass installed.

--SAVE THESE INSTRUCTIONS--


DIMENSIONS

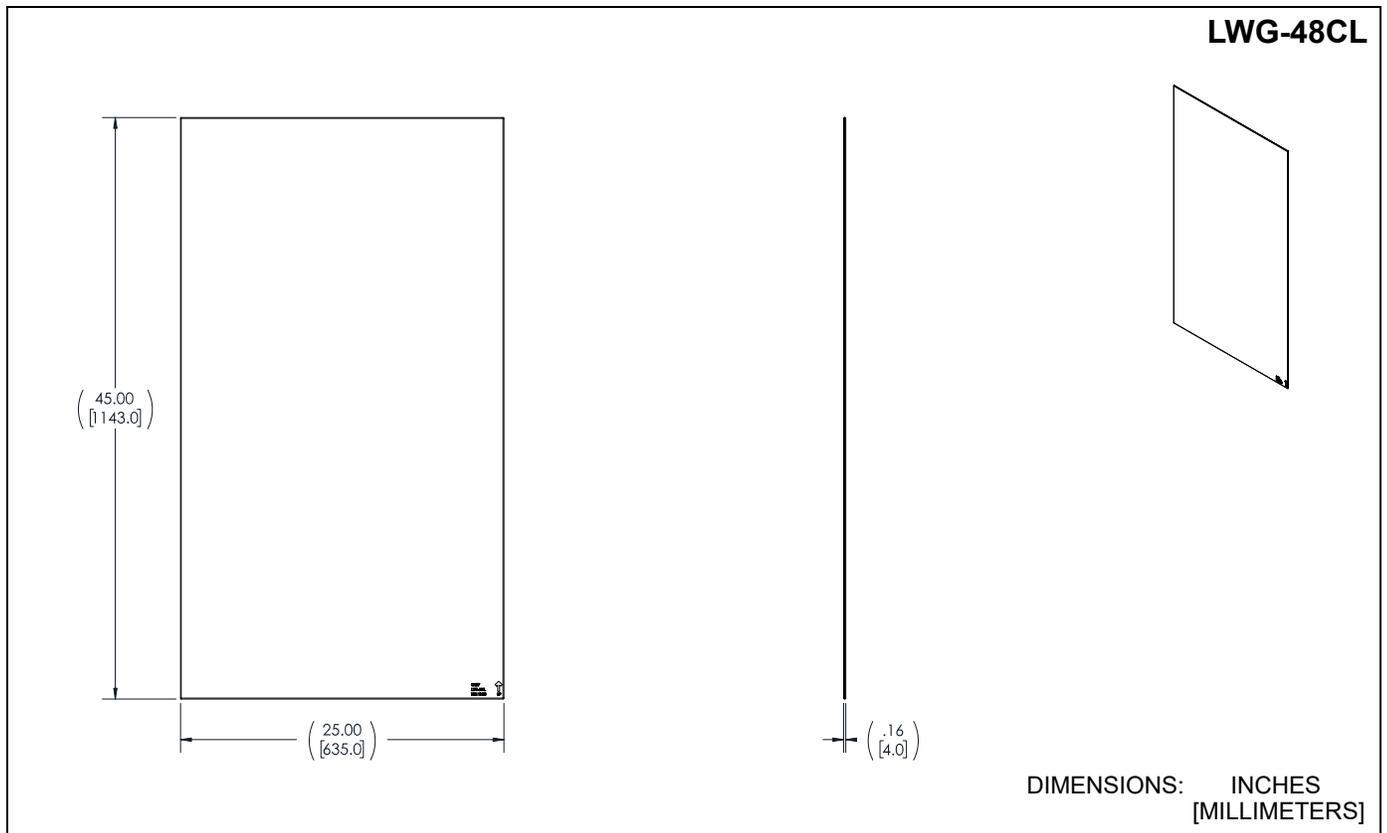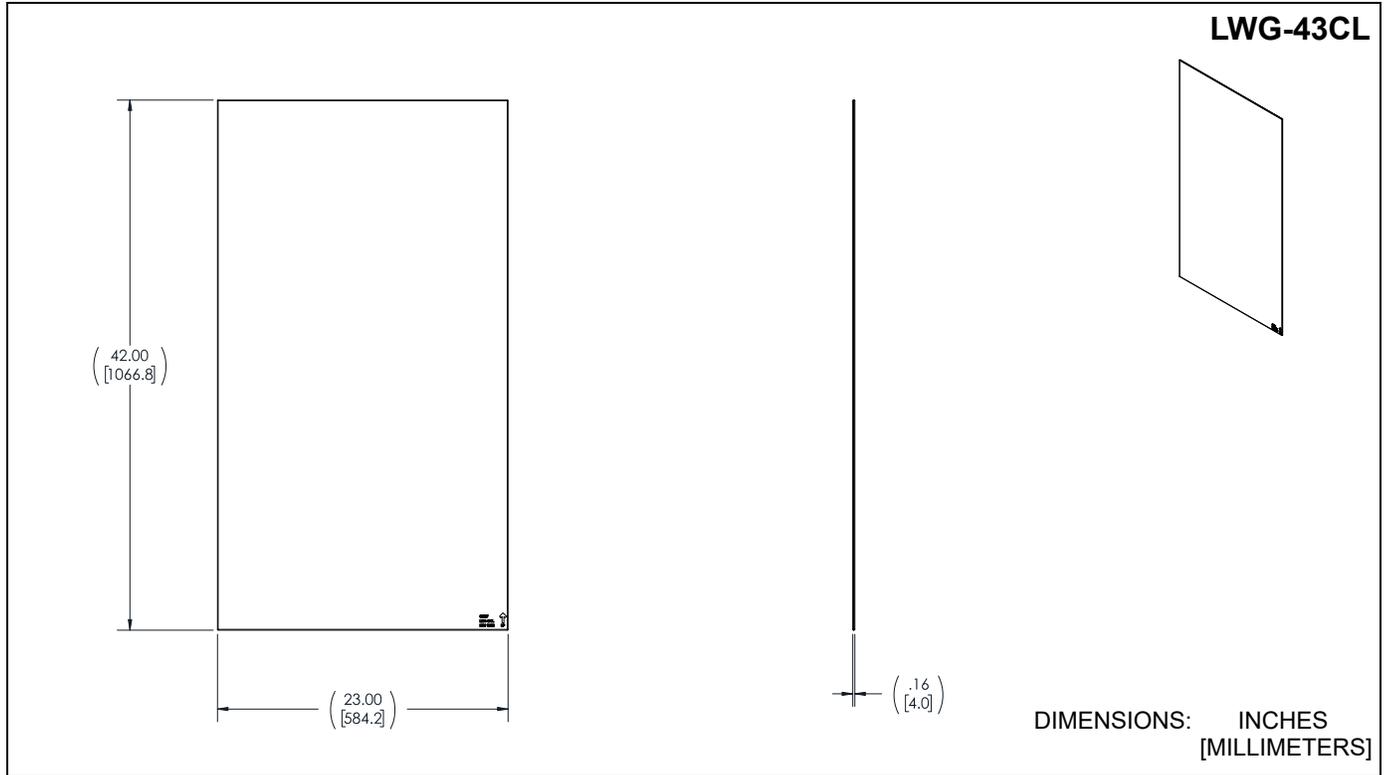


DIMENSIONS -- cont'd

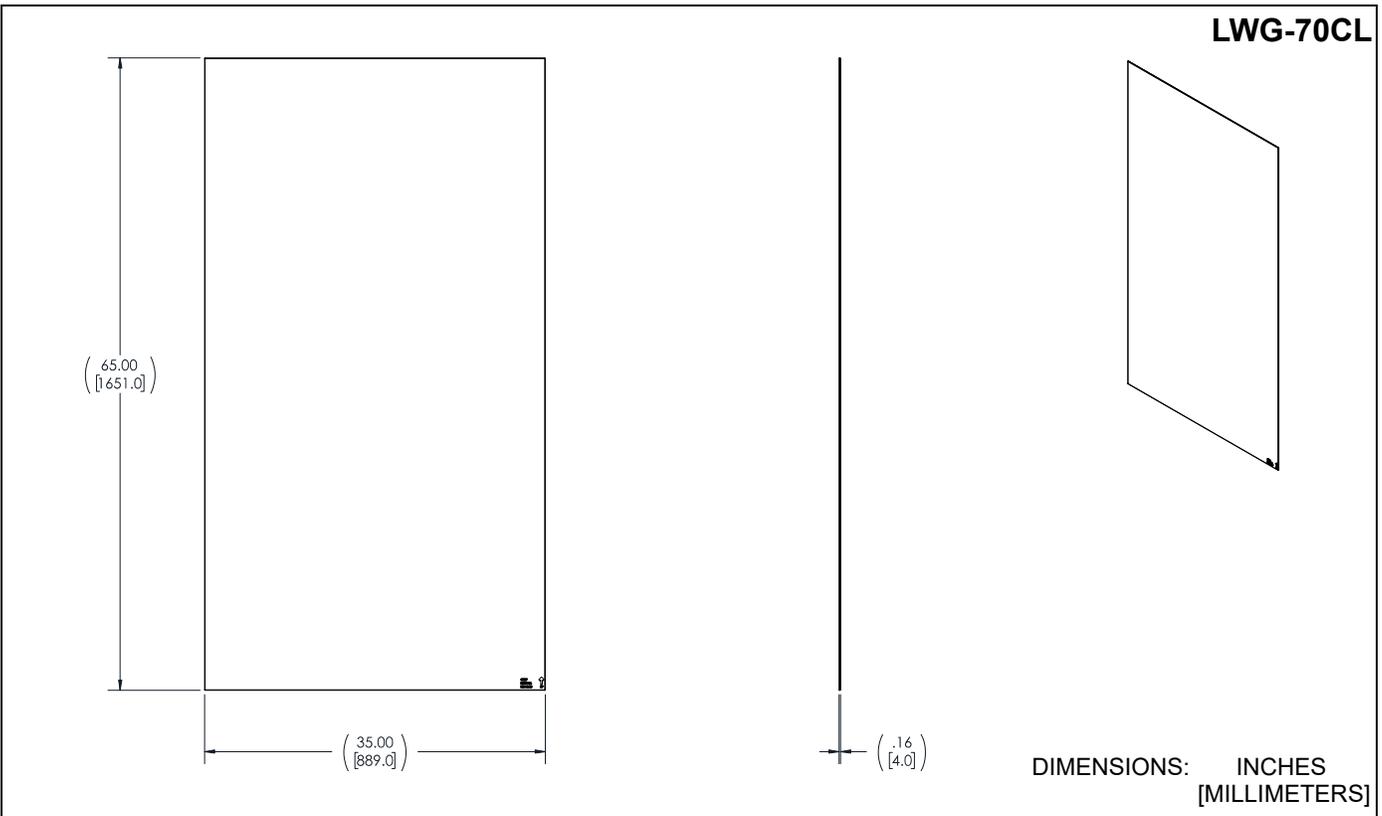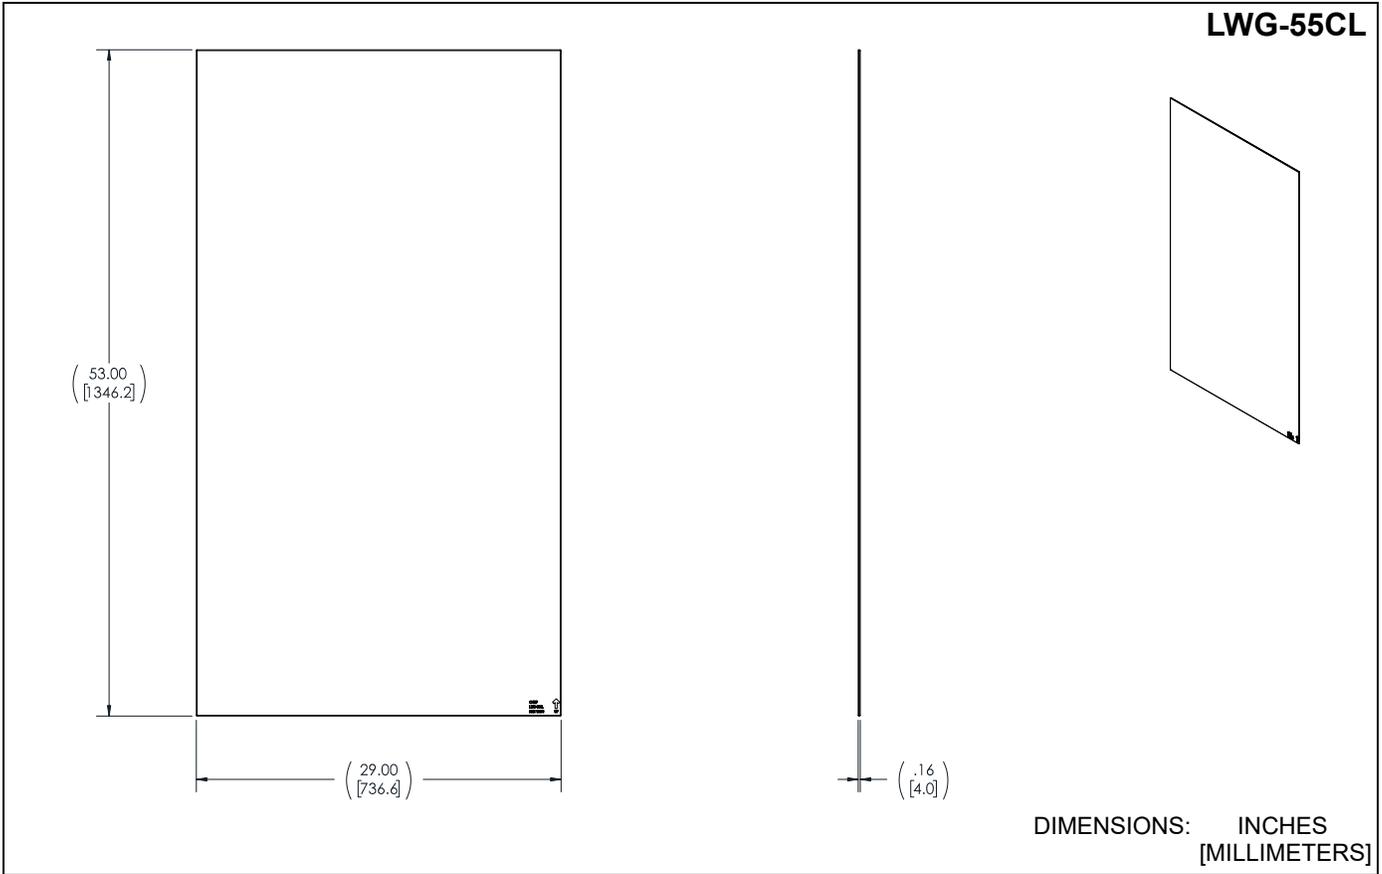


DIMENSIONS -- cont'd

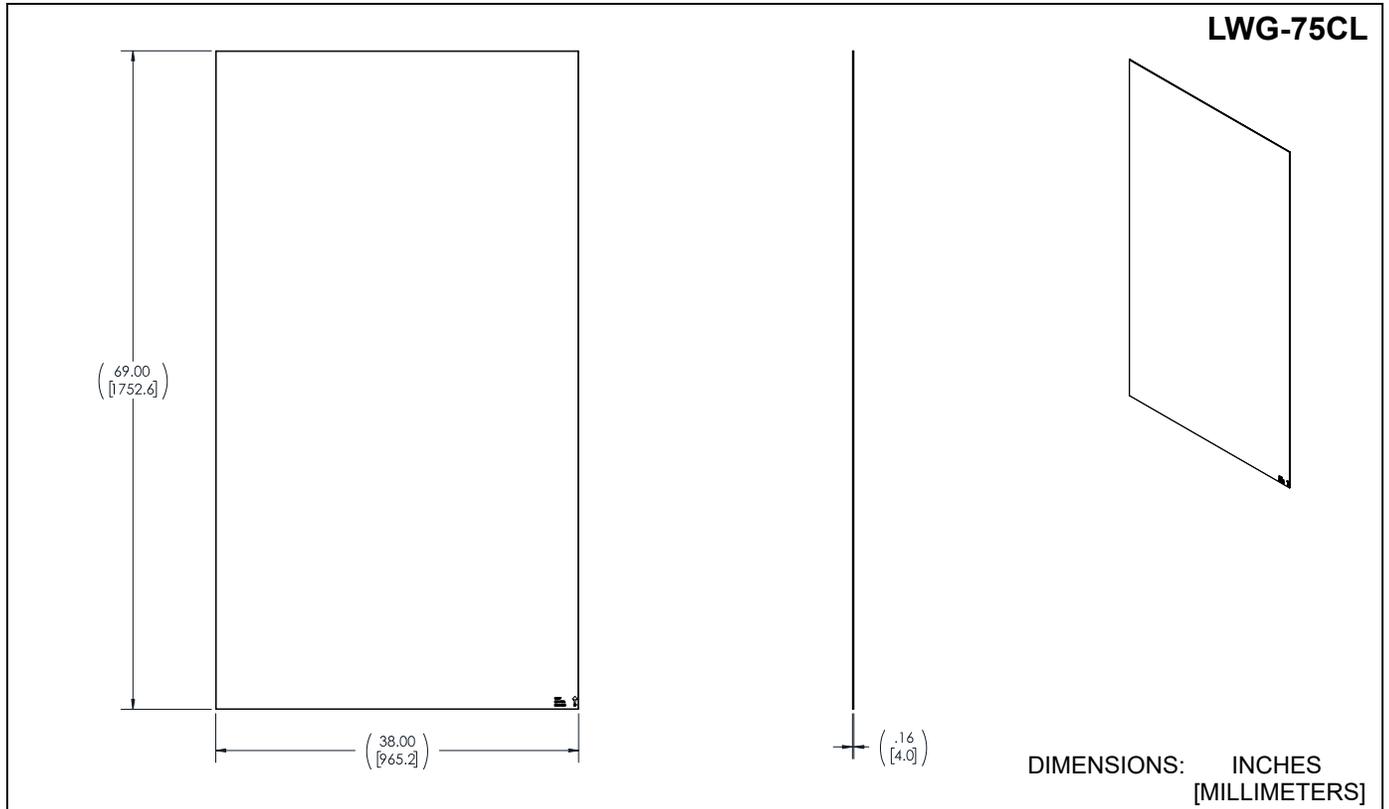

TOOLS REQUIRED FOR INSTALLATION

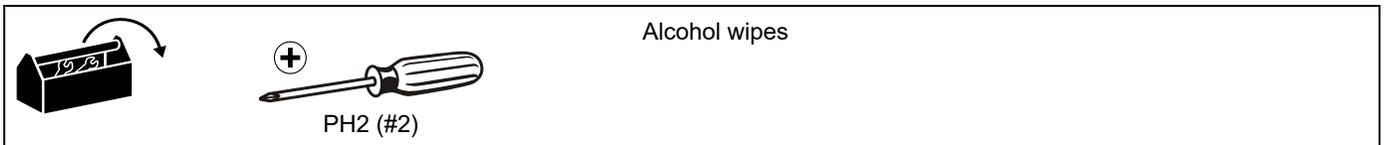

PARTS

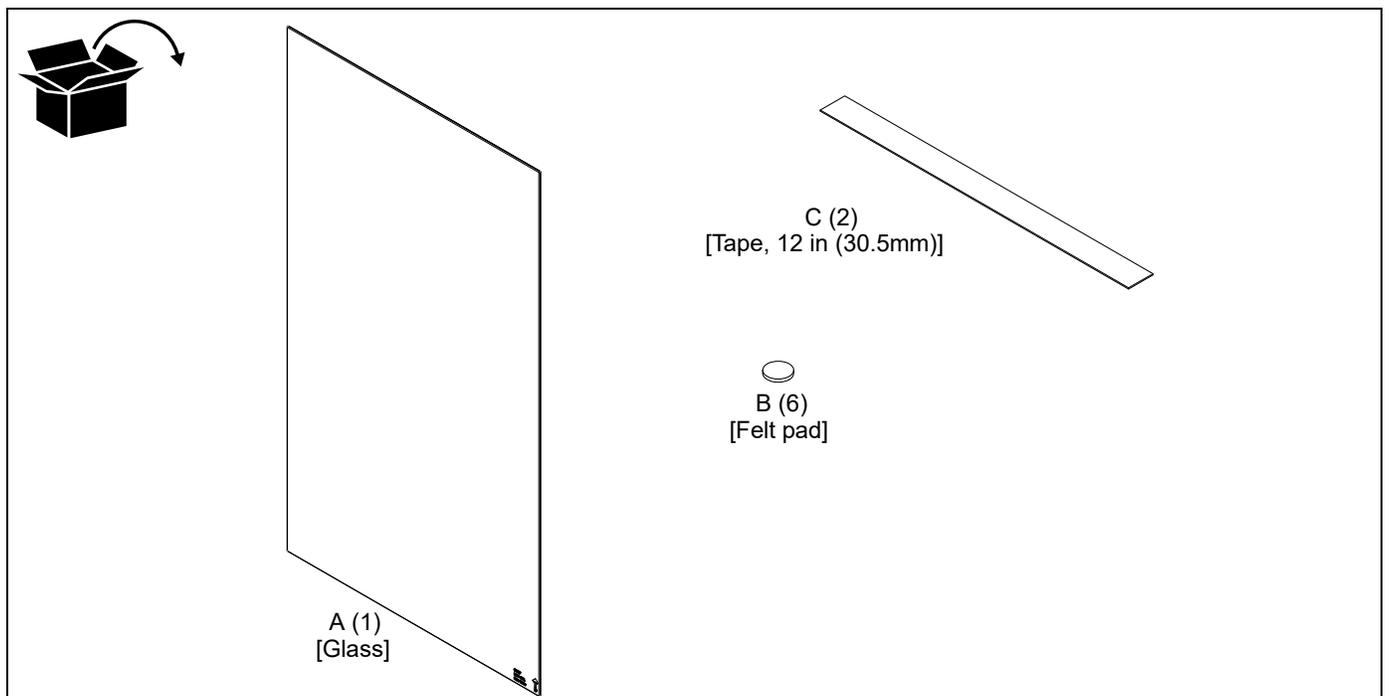

ASSEMBLY

IMPORTANT ! : It is best to install the glass into the kiosk front cover while it is still in the box, and the box is resting on a flat surface.

1. Place the kiosk (still in packaging) on a flat surface. (See Figure 1)
2. Open so that wall bracket is at a 90° angle from the swing door.
3. Keeping the wall bracket at 90°, slide the wall bracket about 1 inch towards bottom of kiosk until hinge pins clear the hinges, and move the wall bracket away from the swing door. (See Figure 1)

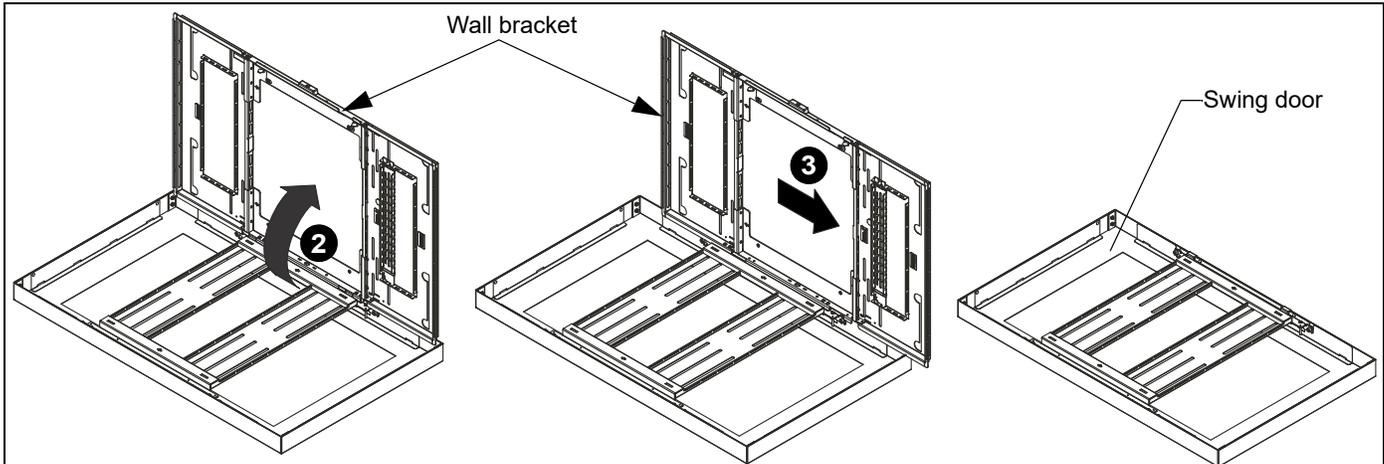


Figure 1

4. Remove and **SAVE** four Phillips screws, loosen four thumb nuts and remove hinged frame from swing door. (See Figure 2)
7. Remove one side of the adhesive tape liners and apply the tape pieces along the sides towards the top of the swing door. (See Figure 3)

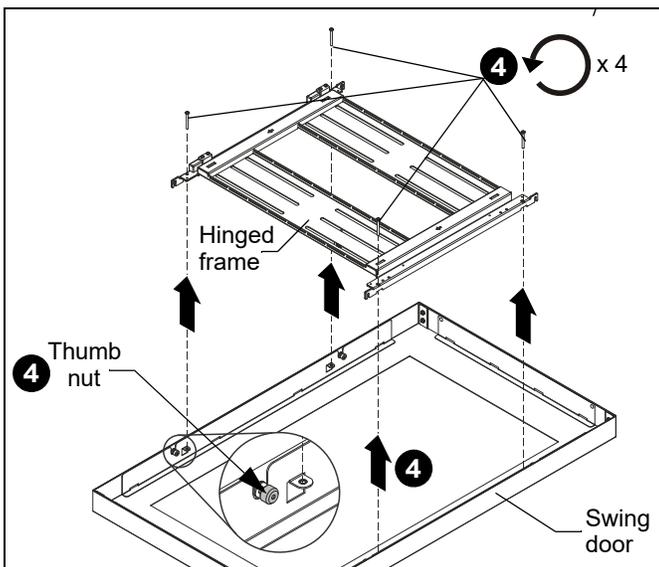


Figure 2

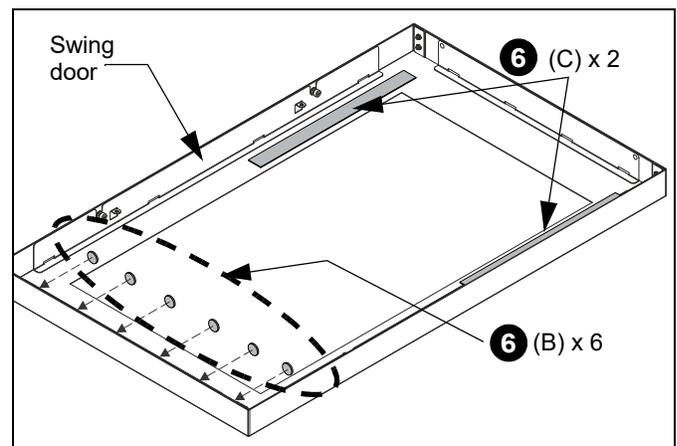


Figure 3

8. Clean the glass (A), ensuring that the area where the adhesive tape will attach is clear of any dirt, dust and oils.

5. Clean the inside frame of the swing door with an alcohol wipe or something similar where the tape (C) and felt pads (B) will be attached, and let dry. (See Figure 3)
6. Evenly space and apply the six felt pads (B) to the inside swing frame (halfway on the bottom extending halfway up the swing door).

9. Place the glass in the swing door with the glass resting on the bottom of the door with the edge against the felt pads.

NOTE: Be sure to place glass with arrow in lower right corner pointing to top of swing door. (See Figure 4)

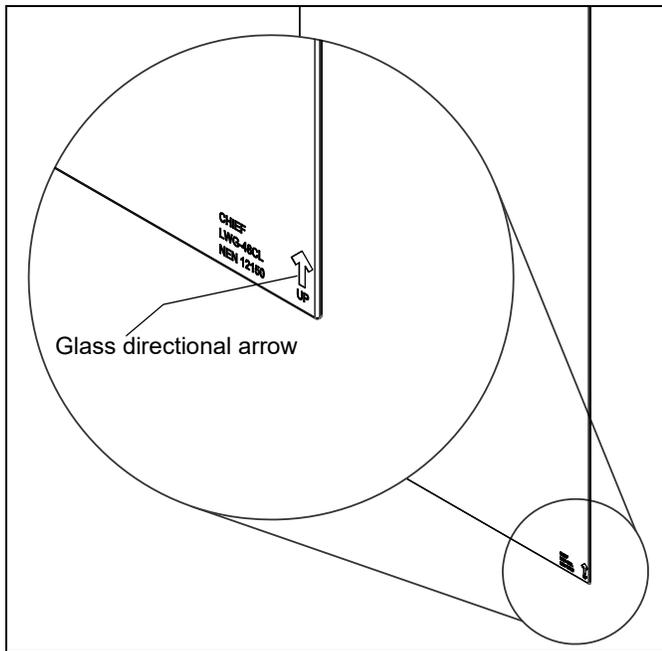


Figure 4

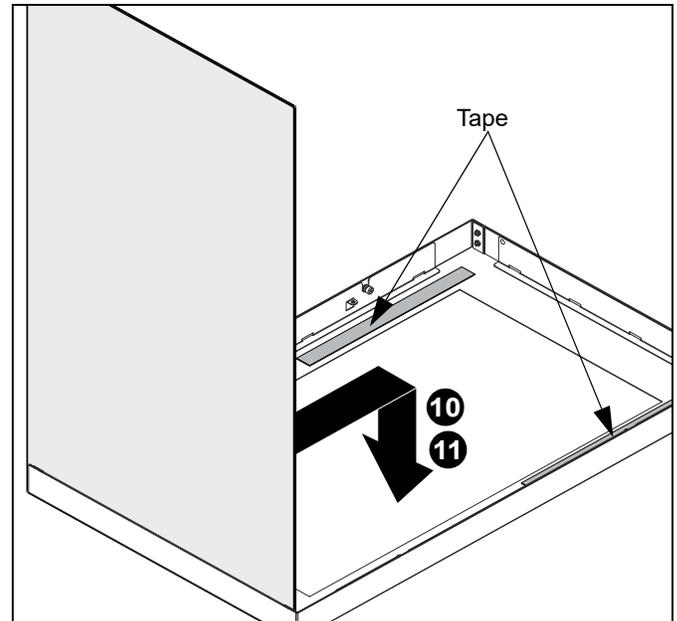


Figure 5

10. Lay the glass down to test the fit within the swing door, and make sure that the area at the top matches with the location of the tape (C). (See Figure 5)
11. Slightly lift the glass enough to remove the tape liners and lay the glass down on top of the tape.
12. Apply 40-50 lbs of force for 5 minutes to ensure the bond between the tape and glass.
13. Apply the monitor gasket to the edges of the opening to the glass as desired. (Refer to kiosk installation manual.)
14. Make sure the visual area of the glass between the monitor and back of glass is clean.
15. Install the monitor and proceed with installation as outlined in the kiosk installation manual.



A brand of  **legrand**

8800-003224 Rev00
©2021 Legrand | AV
www.legrandav.com
03/2021

USA/International	A 6436 City West Parkway, Eden Prairie, MN 55344 P 800.582.6480 / 952.225.6000 F 877.894.6918 / 952.894.6918
Europe	A Franklinstraat 14, 6003 DK Weert, Netherlands P +31 (0) 495 580 852 F +31 (0) 495 580 845
Asia Pacific	A Office No. 918 on 9/F, Shatin Galleria 18-24 Shan Mei Street Fotan, Shatin, Hong Kong P 852 2145 4099 F 852 2145 4477

