


2.

Install the arms to the screen

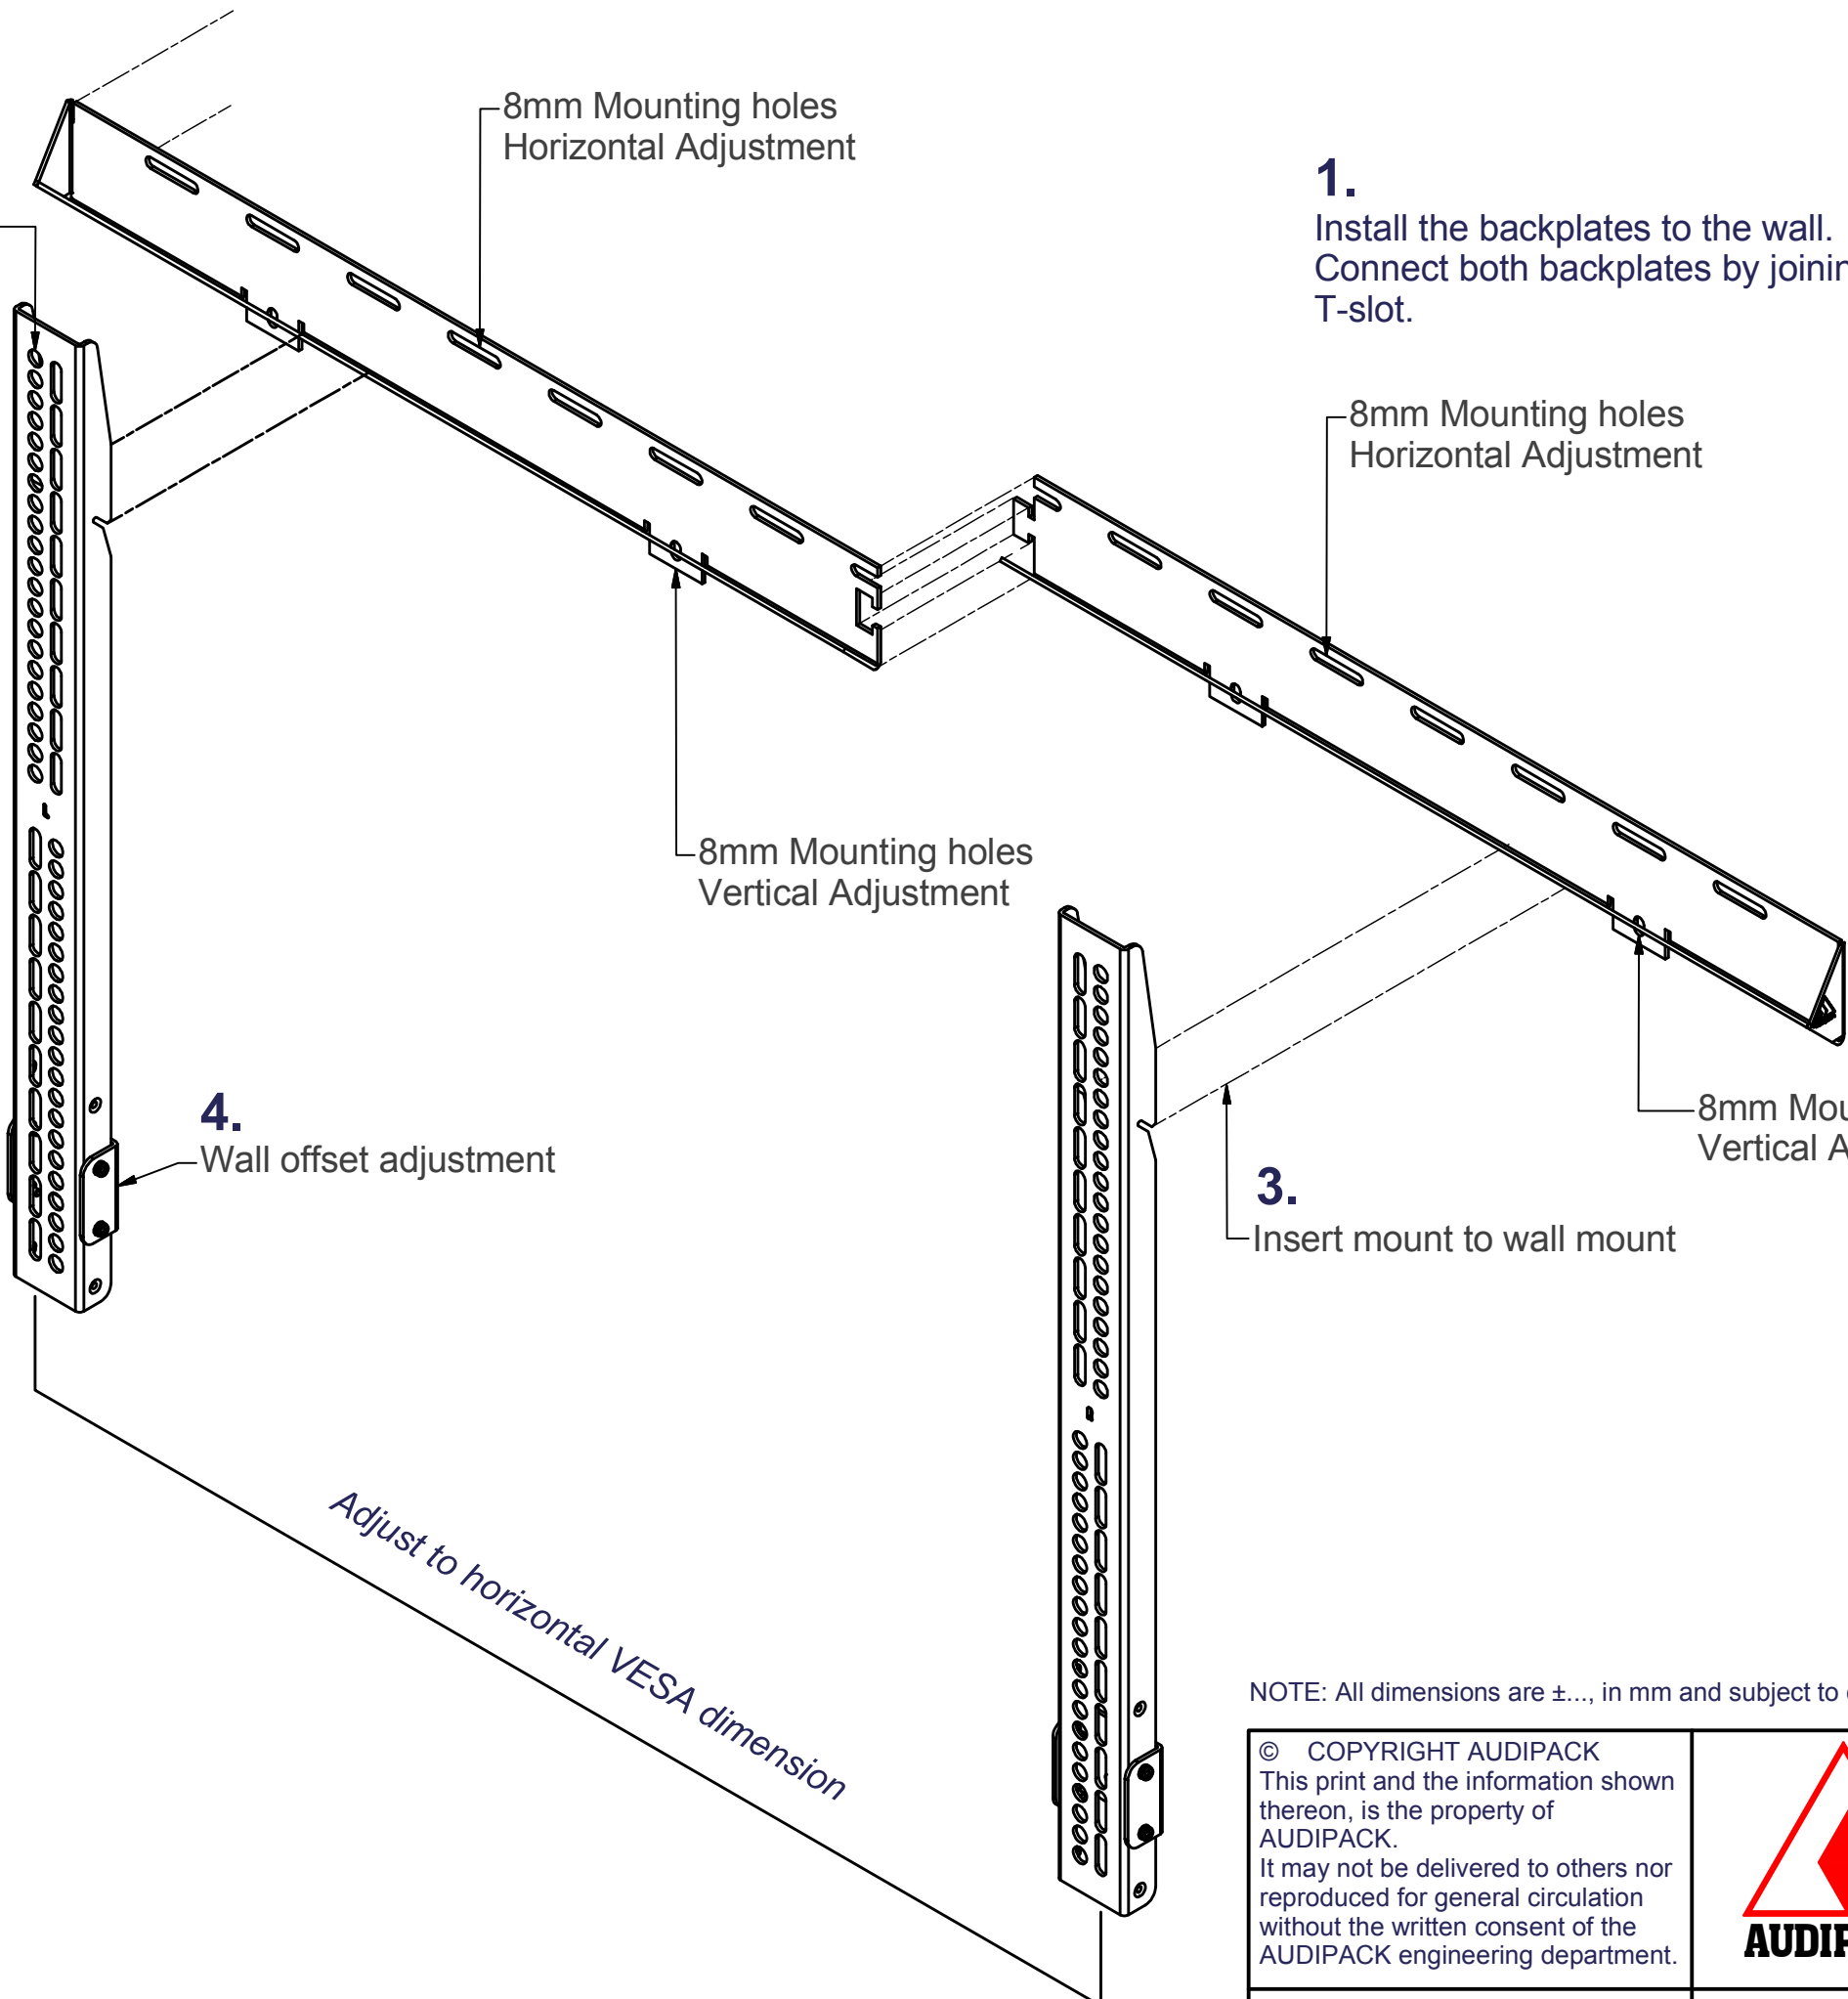

8mm Mounting holes
Horizontal Adjustment

1.

Install the backplates to the wall.
Connect both backplates by joining the
T-slot.

8mm Mounting holes
Horizontal Adjustment

8mm Mounting holes
Vertical Adjustment

8mm Mounting holes
Vertical Adjustment

4.

Wall offset adjustment

3.

Insert mount to wall mount

Adjust to horizontal VESA dimension



Dimensions are indications, not to be used for any preparations. No rights can be derived from the above dimensions.

NOTE: All dimensions are \pm ..., in mm and subject to change

© COPYRIGHT AUDIPACK
 This print and the information shown
 thereon, is the property of
 AUDIPACK.
 It may not be delivered to others nor
 reproduced for general circulation
 without the written consent of the
 AUDIPACK engineering department.



AUDIPACK
 Industriestraat 2-4
 2751 GT Moerkapelle
 the Netherlands
 Tel: +31(0)795931671
 Fax: +31(0)795933115
 www.audipack.com

MANUAL
392696

FLAT PANEL WALL MOUNT